

# ROUND WEIGHTS


## P350



### INSTRUCTIONS


- Weigh car before attaching weights. Add or deduct weight per official race rules. We recommend making your car the maximum weight allowed.
- Round Weights fit a 3/8" in diameter cavity (**Fig. 1**). Secure with PineCar Super Glue (P381) or Formula Glue® (P384). **OPTION:** Seal cavity with a dowel or wood putty, then paint.
- To modify weight of Round Weights, secure in a vice and cut along the molded-in lines with a hacksaw.

**Fig. 1**

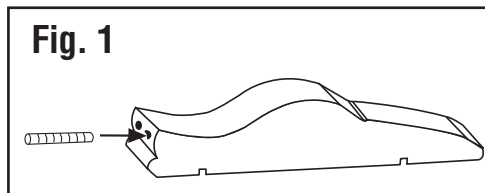

### INSTRUCTIONS

- Pesez la voiture avant attache au poids. Ajoutez ou déduisez le poids par règles officielles de course. Rendez votre voiture le poids de maximum.
- Round Weights ont adapté une cavité du diamètre 9.52 mm (**Fig. 1**). Fixer avec de la PineCar super glue (P381) ou Formula Glue® (P384). **OPTION:** Joint vers le haut de cavité avec un doigt ou mastic en bois, puis peindre.
- Pour modifier le poids des Round Weights, fixez dans un vice et coupez le long du mouler-dans des lignes avec une scie à métaux.

 **WARNING:** Sharp objects! Choking Hazard! Small parts. Not intended for children under 3 years. Adult supervision required.  
**AVERTISSEMENT :** Objet pointu! Danger d'étranglement! Petites pièces. Pas recommandé pour les enfants de moins de 3 ans. Supervision d'un adulte requise.