


# STRIP WEIGHTS - P352




## INSTRUCTIONS

- Weigh car before attaching weights. Add or deduct weight per official race rules. We recommend making your car the maximum weight allowed.
- Secure Strip Weights to bottom of car with included Screws (**Fig. 1**). **OPTION:** Countersink Weights. Trace around Weights on bottom of car. Score lines 1/4-inch apart within the area. Chisel out the area until there is enough room for the Weights to fit.
- To modify weight of Strip Weights, remove a portion of the weight along the molded-in lines with pliers (**Fig. 1**).

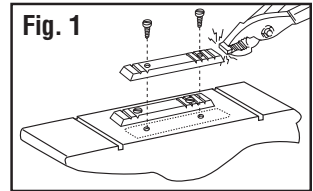

## INSTRUCTIONS

- Pesez la voiture avant attache au poids. Ajoutez ou déduisez le poids par règles officielles de course. Rendez votre voiture le poids de maximum.
- Attachez les poids de bande au fond de la voiture avec les vis (**Fig. 1**). **OPTION:** Fraiser les poids. Placer les poids sur en-dessous de la voiture et tracez. Tracer des lignes 6 mm de largeur dans le secteur. Découper avec un ciseau pour un ajustement plus précis.
- Pour modifier le poids des les poids de bande, enlevez une partie du poids le long du mouler-dans des lignes à l'aide de des pinces (**Fig. 1**).

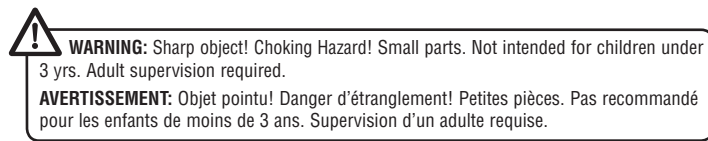

Made in USA F6 ©2003 O CO

PINECAR® Manufactured by

**WOODLAND SCENICS®** PO BOX 98, LINN CREEK, MO 65052 • woodlandscenics.com