



COMBO WEIGHTS

P354



INSTRUCTIONS

- Weigh car before attaching weights. Add or deduct weight per official race rules. We recommend making your car the maximum weight allowed.
- Glue flat side of a Combo Weight to each side of car (test fit with wheels before gluing) (**Fig. 1**) or place two flat sides together to form a cylinder weight (fits a 3/8" in diameter hole) (**Fig. 2**). Secure with PineCar Formula Glue® (P384).
- To modify weight of Combo Weights, remove a portion of the weight along the molded-in lines with pliers.

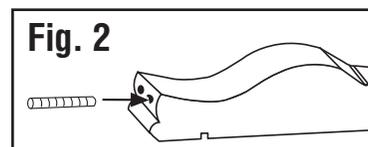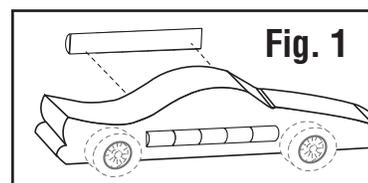

INSTRUCTIONS

- Pesez la voiture avant attache au poids. Ajoutez ou déduisez le poids par règles officielles de course. Rendez votre voiture le poids de maximum.
- Colle côté plat d'un Combo Weight de chaque côté de la voiture (vérifier avec roues avant le collage) (**Fig. 1**) ou placer les côtés plats ensemble pour faire un poids de forme cylindre (placer un trou de diamètre 9.52 mm) (**Fig. 2**). Sécurisé avec PineCar Formula Glue® (P384).
- Pour modifier le poids des les poids de combinaison, enlevez une partie du poids le long du mouler-dans des lignes à l'aide de des pinces (**Fig. 1**).

 **WARNING:** Sharp objects! Choking Hazard! Small parts. Not intended for children under 3 years. Adult supervision required.
AVERTISSEMENT : Objet pointu! Danger d'étranglement! Petites pièces. Pas recommandé pour les enfants de moins de 3 ans. Supervision d'un adulte requise.