


WEDGE - P360



INSTRUCTIONS

DRAW DESIGN

Draw your design on the Block.

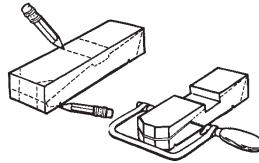


CUT

Cut along lines with a band saw or coping saw.


SHAPE AND SAND

Shape with a rasp or coarse sandpaper. Smooth with medium sandpaper, then fine.

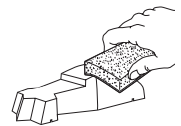

SEAL

Apply a sanding sealer as instructed.

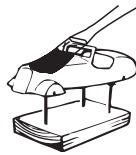

PAINT

Apply two coats of paint, sanding lightly between coats. Apply a final light coat, but do not sand.


ADD DETAILS

Add Custom Parts and Dry Transfer Decals, as desired.



ADD WEIGHTS

Use PineCar weights to make your car the maximum weight allowed per official race rules.



ATTACH WHEELS

Attach wheels and axles to car. Lubricate with Hob-E-Lube® Dry Graphite (P358) or XLR8® Ultra Graphite (P4037).

