

# ROOMETTES

## BORGO AUTO LOANS #01-202-01 AND COMBO R4383

### INSTRUCTIONS

1. REMOVE THE STOREFRONT FROM THE CARDS TOCK SHEET WITH A SHARP HOBBY KNIFE. **DO NOT CUT THE DOTTED LINES.** THEY ARE FOR FOLDING.
2. CAREFULLY BEND THE WALLS, FLOOR AND CEILING INWARD TO CREATE A BOX. **DO NOT OVERBEND THEM!**
3. BEND AND GLUE THE LEFT AND RIGHT WING TABS UNDER THE FLOOR. USE A POPSICLE STICK OR SIMILAR TOOL TO CAREFULLY APPLY PRESSURE ON THE FLOOR OVER EACH WING TO SET THE GLUE.
4. FLIP THE ROOM OVER AND GLUE THE LEFT AND RIGHT WING TABS OVER THE TOP OF THE CEILING.
5. BEND THE TABS LABELLED "BEND UP" AT A RIGHT ANGLE. SET THE ROOM ASIDE TO DRY.
6. ASSEMBLE THE OTHER ROOMS IN A SIMILAR MANNER.
7. DEPENDING ON THE PLACEMENT OF THE ROOMS YOU MAY FIND IT NECESSARY TO REMOVE SOME OF THE PLASTIC MATERIAL AROUND THE WINDOWS INSIDE THE BUILDING TO GET THEM TO FIT. AS AN ALTERNATIVE, YOU CAN CUT THE WALL OF THE ROOM TO FIT AROUND THE WINDOW INSTEAD.
8. CHECK ALL GLUE JOINTS TO MAKE SURE THEY ARE SOLID BEFORE PROCEEDING. TEST FIT THE ROOMS. IF YOU HAVE ASSEMBLED YOUR BUILDING ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS THEY SHOULD FIT EASILY. IF YOU FIND THEY FIT TOO TIGHT VERTICALLY YOU CAN REMOVE SOME OF THE WALL-MOUNT TAB MATERIAL WITH SCISSORS FOR ADDITIONAL CLEARANCE.
9. TO PREVENT LIGHT LEAKAGE, SPREAD A BIT OF GLUE INTO THE PERFORATED SEAMS ON THE CORNERS OF THE ROOM FROM THE OUTSIDE. THIS WILL ALSO MAKE THE JOINTS STRONGER.
10. USE YOUR KNIFE TO REMOVE THE CEILING PLUGS AND INSTALL PROVIDED LEDS, FASTENING THEM IN PLACE WITH GOOD QUALITY TAPE OR GLUE.
11. STARTING WITH THE UPPER FLOOR GLUE THE ROOMS TO THE WALLS, BEING CAREFUL NOT TO GET GLUE ON YOUR CLEAR WINDOW MATERIAL.
12. PLUG THE LED HARNESS INTO YOUR WOODLAND SCENICS® JUST PLUG® OR NCE ILLUMINATOR MODULE. DIM THE LEDS, SIT BACK AND ENJOY YOUR EFFORTS!

TIP: CITY CLASSICS' STOREFRONT SIGN KIT #850 INCLUDES A SIGN FOR BORGO AUTO LOANS FOR THE OUTSIDE OF YOUR BUILDING.

THIS IS NOT A TOY.  
NOT SUITABLE FOR CHILDREN  
UNDER 14 YEARS OF AGE.

# DPM® LANDMARK STRUCTURES® HO SCALE BUILDING KIT



## PAM'S PET SHOP #20200

### INSTRUCTIONS

Follow the enclosed HO scale General Instructions for #100 and #200 series kits. The General Instructions will refer to the drawings and instructions included with this kit. Read through all instructions before beginning construction on your kit.

**Chimneys:** Lightly sand bottom edge of all Chimney Backs (202-6) flat. Sand or file the smooth sides of Chimney Backs and molded-in Chimney fronts so back and front fit tight and flush. Glue together. When glue is dry, sand tops of Chimneys flat. **NOTE:** Glue Roof to bottoms of Chimney Backs.

**Building Fronts:** Sand or file the bottom edge of 202-1A and the top edge of 202-1B so top and bottom fit tight and flush. Glue together.

**Doors and Windows:** Remove Doors and Windows from Sprue. Paint them as desired (following General Instructions). Cut Clear Window Material to cover backs of window frames. Glue to window frames taking care that glue does not squeeze onto Clear Material where visible. "Flash" occurring inside of openings may have to be removed by scraping lightly with a hobby knife. Glue Door and Window assemblies in place.

**Entry Door:** Be careful to not damage the door frames when removing Entry Door (202-7) from Sprue. Note that both Side Panels (202-8) have the same angle on both edges. While glue is still flexible on the "Entry Assembly," glue edges to back of columns by opening on Front Wall (202-1B).

### ANWEISUNGEN


Folgen Sie der beigefügten allgemeinen Bauanweisungen für HO-Bausätze der Serien #100 sowie #200. Diese allgemeine Bauanweisungen bezieht sich sowohl auf die Montagezeichnung sowie auf die Montageanweisungen, die dem Bausatz beiliegt. Lesen Sie bitte sorgfältig alle zugehörigen Anleitungen vor dem Zusammenbau Ihres Bausatzes gut durch.

**Schornsteine:** Unter leichter Anwendung von Schmiergelpapier glätten Sie zunächst die Unterkante aller Schornsteinrückwände (202-6), bis sie glatt sind. Glätten Sie zwecks Passgenauigkeit in gleicher Weise jeweils die nichtdetaillierte Seite der Schornsteinrückwände sowie auch der vorgeformten Schornsteinvorderwände. Kleben Sie diese dann zusammen. Nach der Trocknung soll die Oberseite der kompletten Schornsteine nochmals durch leichtes Reiben mit Schmiergelpapier durchgehend geglättet werden. **HINWEIS:** Kleben Sie das Dach auf die Unterseite der Schornsteinrückwände.

**Vorderwandteile:** Glätten Sie mit Schmiergelpapier die untere Kante des Bauteils 202-1A sowie die obere Kante von Bauteil 202-1B so, dass sie nahtlos zueinander passen. Diese beiden Teile sodann zusammenkleben.

**Türe und Fenster:** Entfernen Sie vom Anguss die Tür- und Fensterteile. Diese können nach Wunsch farblich behandelt werden (der allgemeinen Bauanleitung befolgen). Klarsichtfolienteile so aus- bzw. zurechtschneiden, dass sie die Fensterrahmen-Rückseite jeweils ganz bedecken. Beim Aufkleben der Folienteile auf die Fensterrückseite darauf achten, dass der Klebstoff nicht hindurch zur Sichtlichkeit läuft. Eventuelle Gratreste sorgfältig durch Abkratzen mit einem Hobbymesser entfernen. Abschliessend kleben Sie die kompletten Fenster- sowie Türteile an den entsprechenden Stellen.

**Eingangstür:** Beim Abtrennen vom Anguss der Eingangstür (202-7) achten Sie bitte besonders darauf, dass der Türrahmen dabei nicht beschädigt wird! Beachten Sie ebenfalls, dass beide Eingangstür-Seitenpaneelen (202-8) an beiden Kanten die gleiche Abschrägung aufweisen. Die sodann zusammengeklebte, vorgefertigte Eingangstür-Einheit wird dann vor dem Trocknen von hinten an der Vorderwandöffnung (Eingangsöffnung des Gebäudes) (202-1B) und zwar an den seitlichen Pfeilern anклеbt.

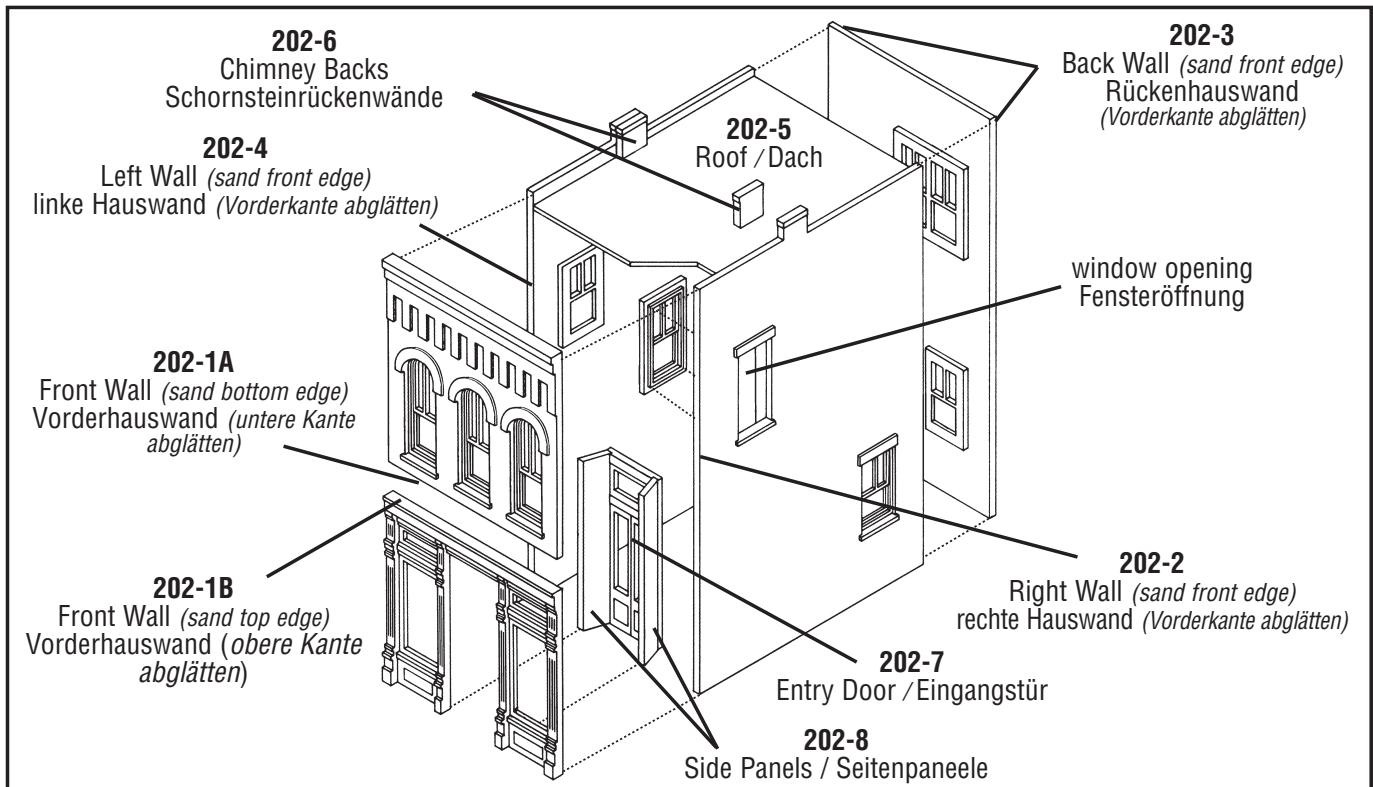

Create interest on your layout. Add lights to your buildings quickly and easily using the Woodland Scenics® Just Plug® Lighting System. Bereichern Sie Ihre Anlage: Mit dem Woodland Scenics Just Plug Beleuchtungssystem lassen sich Gebäude schnell und einfach beleben.

**CAUTION:** Cutting tools recommended. Use with care. / **ACHTUNG:** Schneidwerkzeuge empfohlen. Mit Vorsicht benutzen.

**MODELING AND CARE INFORMATION** This kit suggests the use of materials that may stain or cause damage. Take care to cover project area and clothing appropriately. Follow recommendations for use and cleanup.

Model making product. Not a toy! Not suitable for children under 14 years! / **Produit pour le modélisme. Pas un jouet! Pas adapté aux enfants de moins de 14 ans! / Producto para modelismo. No es un juguete! No adecuado para niños menores de 14 años! / Modellbauartikel. Kein Spielzeug! Nicht geeignet für Kinder unter 14!**